



KBV3011
10A 1Gang
1 Way Switch

KBV3012
10A 1Gang
2 Way Switch



KBV3021
10A 2Gang
1 Way Switch

KBV3022
10A 2Gang
2 Way Switch




KBV3031
10 A 3Gang
1 Way Switch

KBV3032
10 A 3Gang
2 Way Switch




KBV3043
10A 4Gang
1 Way Switch

 KBV3044
10A 4Gang
2 Way Switch

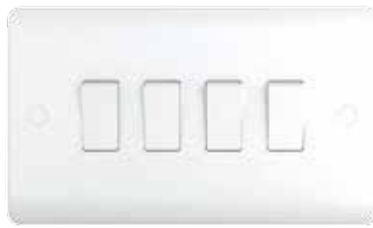


KBV3041
10A 4Gang
1 Way Switch

 KBV3042
10A 4Gang
2 Way Switch

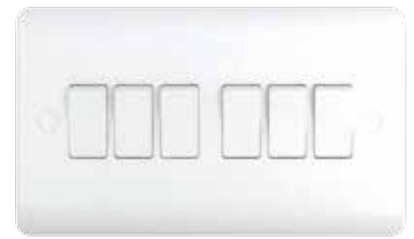

KBV3050
10 A 5Gang
1 Way Switch

 KBV3050
10 A 5Gang
2 Way Switch

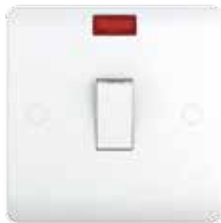


KBV3241
20A 1 Gang double pole switch
with neon



KBV8220



 KBV 3000B
Bell switch

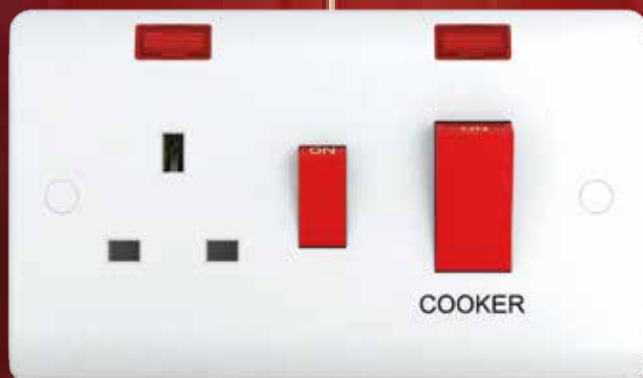



KBV4327
TV + SATELLITE SOCKET




KBV4381
1G TELEPHONE SOCKET SECONDARY




KBV4432-2
COMPUTER & TELEPHONE SOCKET
RJ11 + RJ45



 KBV4831
1 GANG SWITCHED 5 PIN MULTI
FUNCTION SOCKET WITH NEON

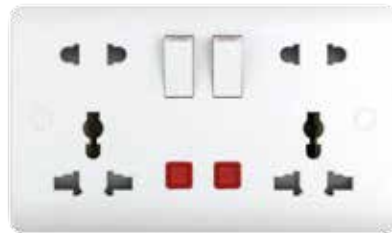


KBV4841
2 GANG SWITCHED 5 PIN MULTI FUNCTION
SOCKET WITH NEON

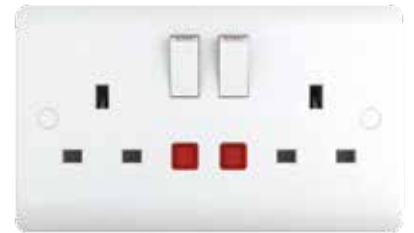 

KBV4060
13A 2 GANG SWITCHED SOCKET,
SINGLE POLE - W/O NEON



 KBV3311
45A COOKER CONTROL
UNIT WITH NEON

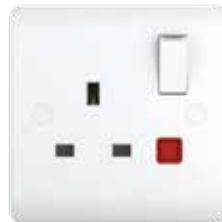

KBV4050
13A 1 GANG SWITCHED SOCKET,
SINGLE POLE - W/O NEON



KBV3505/21
500W 2 GANG 1 WAY DIMMER (3X3)



KBV3510/11
1000W 1 GANG 1 WAY DIMMER (3X3)



KBV4581
SHAVER SOCKET 110V/220V



KBV8220
20A FLUX OUTLE



KBV3011MC
1 GANG 1 WAY SWITCH



KBMC3022
2 GANG 2 WAY SWITCH



KBV3031MC
3 GANG 1 WAY SWITCH



KBV3241MC
20A 1 GANG DOUBLE POLE SWITCH
WITH NEON



KBV 4060
2 gang 13 Amp switch & Socket



KBV4060MC
13A 2 GANG SWITCHED SOCKET,
SINGLE POLE



KBV8014MC
40MM 1 GANG METAL CLAD BOX WITH
TERMINAL (WITHOUT BLANK PLATE)



KBV8024MC
40MM 2 GANG METAL CLAD BOX WITH
TERMINAL (WITHOUT BLANK PLATE)

